

WPIM-T1/DDS

User's Guide





Only qualified personnel should perform installation procedures.

NOTICE

Cabletron Systems reserves the right to make changes in specifications and other information contained in this document without prior notice. The reader should in all cases consult Cabletron Systems to determine whether any such changes have been made.

The hardware, firmware, or software described in this manual is subject to change without notice.

IN NO EVENT SHALL CABLETRON SYSTEMS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS MANUAL OR THE INFORMATION CONTAINED IN IT, EVEN IF CABLETRON SYSTEMS HAS BEEN ADVISED OF, KNOWN, OR SHOULD HAVE KNOWN, THE POSSIBILITY OF SUCH DAMAGES.

© 1998 by Cabletron Systems, Inc., P.O. Box 5005, Rochester, NH 03866-5005

All Rights Reserved

Printed in the United States of America

Order Number: 9032750 December 1998

Cabletron Systems, SecureFast, QuickSET, and LANVIEW are registered trademarks, and **CyberSWITCH** is a trademark of Cabletron Systems, Inc.

All other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies.

FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.

WARNING: Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INDUSTRY CANADA NOTICE

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements documents (s). The department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. **Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the ringer equivalence Numbers of all the devices does not exceed 5.

VCCI NOTICE

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（V C C I）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

CABLETRON SYSTEMS, INC. PROGRAM LICENSE AGREEMENT

IMPORTANT: Before utilizing this product, carefully read this License Agreement.

This document is an agreement between you, the end user, and Cabletron Systems, Inc. (“Cabletron”) that sets forth your rights and obligations with respect to the Cabletron software program (the “Program”) contained in this package. The Program may be contained in firmware, chips or other media. BY UTILIZING THE ENCLOSED PRODUCT, YOU ARE AGREEING TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT, WHICH INCLUDES THE LICENSE AND THE LIMITATION OF WARRANTY AND DISCLAIMER OF LIABILITY. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE UNUSED PRODUCT TO THE PLACE OF PURCHASE FOR A FULL REFUND.

CABLETRON SOFTWARE PROGRAM LICENSE

1. **LICENSE.** You have the right to use only the one (1) copy of the Program provided in this package subject to the terms and conditions of this License Agreement.

You may not copy, reproduce or transmit any part of the Program except as permitted by the Copyright Act of the United States or as authorized in writing by Cabletron.
2. **OTHER RESTRICTIONS.** You may not reverse engineer, decompile, or disassemble the Program.
3. **APPLICABLE LAW.** This License Agreement shall be interpreted and governed under the laws and in the state and federal courts of New Hampshire. You accept the personal jurisdiction and venue of the New Hampshire courts.

EXCLUSION OF WARRANTY AND DISCLAIMER OF LIABILITY

1. **EXCLUSION OF WARRANTY.** Except as may be specifically provided by Cabletron in writing, Cabletron makes no warranty, expressed or implied, concerning the Program (including its documentation and media).

CABLETRON DISCLAIMS ALL WARRANTIES, OTHER THAN THOSE SUPPLIED TO YOU BY CABLETRON IN WRITING, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE PROGRAM, THE ACCOMPANYING WRITTEN MATERIALS, AND ANY ACCOMPANYING HARDWARE.
2. **NO LIABILITY FOR CONSEQUENTIAL DAMAGES.** IN NO EVENT SHALL CABLETRON OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR RELIANCE DAMAGES, OR OTHER LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THIS CABLETRON PRODUCT, EVEN IF CABLETRON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, OR ON THE DURATION OR LIMITATION OF IMPLIED WARRANTIES, IN SOME INSTANCES THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

The enclosed product (a) was developed solely at private expense; (b) contains “restricted computer software” submitted with restricted rights in accordance with Section 52227-19 (a) through (d) of the Commercial Computer Software - Restricted Rights Clause and its successors, and (c) in all respects is proprietary data belonging to Cabletron and/or its suppliers.

For Department of Defense units, the product is licensed with “Restricted Rights” as defined in the DoD Supplement to the Federal Acquisition Regulations, Section 52.227-7013 (c) (1) (ii) and its successors, and use, duplication, disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at 252.227-7013. Cabletron Systems, Inc., 35 Industrial Way, Rochester, New Hampshire 03867-0505.

DECLARATION OF CONFORMITY

Application of Council Directive(s): **89/336/EEC
73/23/EEC**

Manufacturer's Name: **Cabletron Systems, Inc.**

Manufacturer's Address: **35 Industrial Way
PO Box 5005
Rochester, NH 03867**

European Representative Name: **Mr. J. Solari**

European Representative Address: **Cabletron Systems Limited
Nexus House, Newbury Business Park
London Road, Newbury
Berkshire RG13 2PZ, England**

Conformance to Directive(s)/Product Standards: **EC Directive 89/336/EEC
EC Directive 73/23/EEC
EN 55022
EN 50082-1
EN 60950**

Equipment Type/Environment: **Networking Equipment, for use in a
Commercial or Light Industrial
Environment.**

We the undersigned, hereby declare, under our sole responsibility, that the equipment packaged with this notice conforms to the above directives.

Manufacturer	Legal Representative in Europe
Mr. Ronald Fotino	Mr. J. Solari
Full Name	Full Name
Principal Compliance Engineer	Managing Director - E.M.E.A.
Title	Title
Rochester, NH, USA	Newbury, Berkshire, England
Location	Location

CONTENTS

INTRODUCTION	ix
Using This Manual	ix
Structure of This Guide	ix
Related Manuals	x
Document Conventions	xi
Getting Help	xii

CHAPTER 1 OVERVIEW

1.1	Firmware Revision	1-2
1.2	WPIM-T1/DDS Features	1-2
1.3	WAN Protocols	1-3
1.4	MIB Support	1-3

CHAPTER 2 SETUP AND INSTALLATION

2.1	Installing the WPIM-T1/DDS	2-1
2.1.1	Unpacking the WPIM-T1/DDS	2-1
2.1.2	Pre-Installation	2-2
2.1.3	Installing the WPIM-T1/DDS	2-2
2.1.4	Post-Installation	2-3
2.2	LEDs	2-4
2.3	Required Operations	2-4
2.3.1	Choosing T1 or DDS Mode	2-4
2.3.2	WAN Configuration	2-5
2.4	Connecting the WAN cable to the WPIM-T1/DDS	2-6

CHAPTER 3 LOCAL MANAGEMENT FOR T1 SERVICE

3.1	The WAN Physical Configuration Screen	3-2
3.1.1	WAN Physical Configuration Screen Fields	3-3
3.1.2	WPIM Line Configuration Fields	3-4
3.1.3	The WPIM Timeslot Configuration Table	3-5
3.2	The WAN Interface Configuration Screen	3-7
3.2.1	WAN Interface Configuration Screen Fields	3-8
3.2.1.1	Frame Relay as the Protocol Manager	3-8
3.2.1.2	PPP as the Protocol Manager	3-9
3.2.1.3	Command and Interface Table Fields	3-10

3.3	Full T-1 Configuration Using PPP	3-11
3.3.1	T1 Service Physical Configuration	3-12
3.3.2	T1 Interface Configuration	3-13
3.4	Fractional T-1 Configuration Using PPP	3-14
3.4.1	T1 Physical Configuration	3-15
3.4.2	T1 Interface Configuration	3-17
3.5	Frame Relay Configuration	3-17
3.5.1	Frame Relay Physical Configuration	3-18
3.5.2	Frame Relay Interface Configuration	3-20

CHAPTER 4 LOCAL MANAGEMENT FOR DDS SERVICE

4.1	The WAN Physical Configuration Screen	4-2
4.1.1	WAN Physical Configuration Screen Fields	4-2
4.1.2	WPIM Line Configuration Fields	4-4
4.2	WAN Interface Configuration Screen	4-5
4.2.1	WAN Interface Configuration Screen Fields	4-5
4.2.1.1	Frame Relay as the Protocol Manager	4-6
4.2.1.2	PPP as the Protocol Manager	4-7
4.2.1.3	Command and Interface Table Fields	4-8
4.3	DDS Service Configuration	4-9
4.3.1	DDS Service Physical Configuration	4-9
4.3.2	DDS Service Interface Configuration	4-10

APPENDIX A SPECIFICATIONS

A.1	Physical Properties	A-1
A.2	Environmental Requirements	A-1
A.3	Regulatory Compliance	A-1
A.4	T1 Interface Cabling	A-2
A.4.1	Cable Assemblies and Pinouts	A-2
A.5	DDS Port Assignment	A-4

APPENDIX B FCC PART 68 - USER'S INFORMATION

INTRODUCTION

Welcome to the Cabletron Systems WPIM-T1/DDS User's Guide. This manual provides hardware information and explains the use of Local Management to control and manage the Cabletron Systems WPIM-T1/DDS.

The WPIM-T1/DDS is installed in and provides connectivity and functionality to the CSX400 and the HSI-M-W6. The WPIM-T1/DDS provides full or fractional T1, or a DDS interface to these platforms.

The WPIM-T1/DDS uses the same connector to provide T1 and DDS connectivity and therefore will only support one service at a time. Refer to [Chapter 1](#) for more detailed information on the WPIM-T1/DDS capabilities.



The device in which the WPIM-T1/DDS is to be installed may be referred to as the host platform in this document.

USING THIS MANUAL

Read through this manual completely to familiarize yourself with its content and to gain an understanding of the features and capabilities of the WPIM-T1/DDS. You should have a general working knowledge of the following data communications networks and their physical layer components before using the WPIM-T1/DDS:

- WAN
- Ethernet and IEEE 802.3

STRUCTURE OF THIS GUIDE

The following list briefly explains each chapter of the WPIM-T1/DDS manual:

[Chapter 1, Overview](#), describes the WPIM-T1/DDS features and the protocols that the WPIM-T1/DDS supports.

[Chapter 2, Setup and Installation](#), directs the user to appropriate documentation to prepare the WPIM-T1/DDS for proper setup. It also describes cabling requirements.

Chapter 3, Local Management for T1 Service, describes how to use Local Management to set up T1 service with the WPIM-T1/DDS.

Chapter 4, Local Management for DDS Service, describes how to use Local Management to set up DDS service with the WPIM-T1/DDS.

Appendix A, Specifications, provides information on physical properties, environmental requirements, regulatory compliance, pinouts and LED definitions.

Appendix B, FCC Part 68 - User's Information, explains FCC Rules for the WPIM-T1/DDS.

RELATED MANUALS

Refer to the manual included with the host platform in which the WPIM-T1/DDS is installed to supplement the procedures and other technical data provided in this manual. This manual references procedures in these manuals, where appropriate, but does not repeat them.

The following manuals may help the user to set up and manage the WPIM-T1/DDS:

Cabletron Systems *HSIM-W6 Installation Guide*

Cabletron Systems *HSIM-W84 Installation Guide*

Cabletron Systems *QuickSET Configuration Guide for CSX200, CSX400, CSX400-DC, HSIM-W6, and HSIM-W84*

Cabletron Systems *CyberSWITCH CSX400 and CSX400-DC Installation Guide*

 
Cabletron Systems *Local Management for CSX200, CSX400, CSX400-DC, HSIM-W6, and HSIM-W84*

The *HSIM-W6 Installation Guide*, the *HSIM-W84 Installation Guide*, and the *Local Management for CSX200, CSX400, CSX400-DC, HSIM-W6, and HSIM-W84* guide are contained on the QuickSET CD-ROM, and along with the other manuals listed above, can be obtained from the World Wide Web in Adobe Acrobat Portable Document Format (PDF) at the following site:

<http://www.cabletron.com/>

DOCUMENT CONVENTIONS

The following conventions are used throughout this document:



Note symbol. Calls the reader's attention to any item of information that may be of special importance.



Tip symbol. Conveys helpful hints concerning procedures or actions.



Caution symbol. Contains information essential to avoid damage to the equipment.



Electrical Hazard Warning symbol. Warns against an action that could result in personal injury or death due to an electrical hazard.

bold type	Bold type can denote either a user input or a highlighted screen selection.
RETURN	Indicates either the ENTER or RETURN key, depending on your keyboard.
ESC	Indicates the keyboard Escape key.
SPACE bar	Indicates the keyboard space bar key.
BACKSPACE	Indicates the keyboard backspace key.
arrow keys	Refers to the four keyboard arrow keys.
[-]	Indicates the keyboard – key.
DEL	Indicates the keyboard delete key.
<i>italic type</i>	Emphasizes important information, indicates variables, and indicates complete document titles.
n.nn	A period in numerals signals the decimal point indicator. (e.g., 1.75 equals one and three fourths, or the Decimal Dotted Notation (DDN) for an IP address.
x	Indicates the generic use of a letter. (e.g., xxx indicates any combination of three alphabetic characters.)

- n* Indicates the generic use of a number. (e.g., 19*nn* indicates a four-digit number in which the last two digits are unknown.)
- [] In the Local Management screens, the brackets indicate that a value may be entered or selected. In the format descriptions in the Network Tools section, required arguments are enclosed in [].
- ◊ In the format descriptions in the Network Tools section, optional arguments are enclosed in ◊.

GETTING HELP

For additional support related to this device or document, contact Cabletron Systems:

World Wide Web	http://www.cabletron.com/
Phone	(603) 332-9400
Internet mail	support@cabletron.com
FTP Login Password	ftp://ftp.cabletron.com <i>anonymous</i> <i>your email address</i>
To send comments or suggestions concerning this document, contact the Cabletron Systems Technical Writing Department via the following email address: TechWriting@cabletron.com <i>Make sure to include the document Part Number in the email message.</i>	

Before calling Cabletron Systems, have the following information ready:

- Your Cabletron Systems service contract number
- A description of the failure
- A description of any action(s) already taken to resolve the problem (e.g., changing mode switches, rebooting the unit, etc.)
- The serial and revision numbers of all involved Cabletron Systems products in the network
- A description of your network environment (layout, cable type, etc.)
- Network load and frame size at the time of trouble (if known)
- The device history (i.e., have you returned the device before, is this a recurring problem, etc.)
- Any previous Return Material Authorization (RMA) numbers

CHAPTER 1

 
OVERVIEW

This chapter describes the features of the WPIM-T1/DDS. It also briefly explains the WAN protocols supported by the WPIM-T1/DDS.

Some steps for successful operation of this device are:

- Install the WPIM-T1/DDS in a Wide Area Network host platform. Refer to **Chapter 2** for direction on installation procedures. Refer to the appropriate host manual (i.e., the Cabletron Systems *CyberSWITCH CSX400 and CSX400-DC Installation Guide* for other installation and troubleshooting procedures.
- Access Local Management. Refer to the appropriate host platform Local Management User's Guide for instructions on setting up and accessing Local Management.
- Select the service desired, T1 or DDS, using Network Tools.
- Once the desired service has been chosen, refer to the appropriate chapter in this document for setup information.

Due to the automation of setup features, it is strongly recommended to use the Graphical User Interface, QuickSET, to fully configure the device. QuickSET is the desired method for configuring the WPIM-T1/DDS, after using Local Management to choose T1 or DDS service. Check the Release Notes for the availability of QuickSET for configuration. Use Local Management, described in this manual, if QuickSET is not available.



The device in which the WPIM-T1/DDS is to be installed may be referred to as the host platform in this documentation.

1.1 FIRMWARE REVISION

Important Notice

Depending on the firmware version used in the WPIM-T1/DDS, some features described in this document may not be supported. Refer to the Release Notes shipped with the WPIM-T1/DDS to determine which features are supported.

This manual covers Firmware Revision level 02.01.XX. Later revisions may be reflected in an updated manual. Please check carefully to verify the revision level of your device, to ensure that this manual will meet your needs.

1.2 WPIM-T1/DDS FEATURES

The WPIM-T1/DDS extends the functionality of the Wide Area Network host platform to provide a full or fractional T1 or a DDS interface for the host platform (CSX400 or the HSIM-W6) into which the WPIM-T1/DDS (Figure 1-1) can be installed.



Figure 1-1 WPIM-T1/DDS

In the T1 service mode, the WPIM-T1/DDS provides a T1 interface that includes a built-in Channel Service Unit/Digital Service Unit (CSU/DSU) for direct connection to a T1 line.

In the DDS service mode, the WPIM-T1/DDS extends the functionality of the Wide Area Network module to allow remote connectivity using Digital Data Service (DDS). It provides a DDS interface that includes a built-in Channel Service Unit/Digital Service Unit (CSU/DSU) for direct connection to a DDS line, and supports remote CSU diagnostic loopback and Non-Latching remote DSU diagnostic loopback.



A connection can only be chosen for either T1 or DDS service in Local Management. Both services cannot operate at the same time.

1.3 WAN PROTOCOLS

The module in which the WPIM-T1/DDS is installed supports the following WAN protocols (refer to the Release Notes included with the host MIM or standalone hub for a list of current protocols):

- Point to Point Protocol (PPP) and as defined by RFC 1661
- Frame Relay as defined by RFC 1490
- ISDN as defined by Q.921 and Q.931

1.4 MIB SUPPORT

Refer to the Release Notes included with the host platform for a list of all MIBs supported by the WPIM-T1/DDS. For information about how to extract and compile individual MIBs, contact Cabletron Systems (refer to [Getting Help](#)).

CHAPTER 2

SETUP AND INSTALLATION



Only qualified personnel should install the WPIM-T1/DDS. This User's Guide is intended for the experienced network equipment installer.

This chapter details set up and installation of the WPIM-T1/DDS into a host platform.



QuickSET or Local Management must be used to set up the WPIM-T1/DDS in management before any connections are made to the WAN. Follow the directions carefully.

2.1 INSTALLING THE WPIM-T1/DDS

For additional support related to the WPIM-T1/DDS, refer to the host platform manual into which the WPIM-T1/DDS is being installed. Locate the guide by clicking on the Cabletron Systems QuickSET program group icon after installing the QuickSET CD on your computer, or see [Related Manuals](#) in the [Introduction](#).



Some WPIMs require version 1.02 or greater of QuickSET to participate and function correctly in your network. Contact Cabletron Systems to obtain the latest version of QuickSET if you do not have it. Refer to [Getting Help](#) in the [Introduction](#) for more information.

2.1.1 Unpacking the WPIM-T1/DDS



Both the WPIM-T1/DDS and the host platform in which the WPIM-T1/DDS is installed are static sensitive devices. Use a grounding strap and follow all static-safe precautions during installation. Failure to do so could result in damage to the WPIM-T1/DDS and the host platform receiving it.

1. Carefully remove the WPIM-T1/DDS from the shipping box.
2. Visually inspect the WPIM-T1/DDS. If there are any signs of damage, contact Cabletron Systems immediately. Refer to [Getting Help](#).

2.1.2 Pre-Installation

To prepare the host platform for the WPIM-T1/DDS, proceed as follows:

1. Turn off and disconnect the host platform from the power source.
2. Mark all network cables attached to the host platform for ease of re-installation.
3. Disconnect all network cables attached to the host platform.
4. Refer to detailed instructions contained in the host platform's user guide to remove the chassis cover. This procedure must be completed before installing the WPIM-T1/DDS.

2.1.3 Installing the WPIM-T1/DDS

To install the WPIM-T1/DDS into the device, refer to [Figure 2-1](#) and complete the following steps:



When removing an existing WPIM, make sure to pull the module straight up to avoid damaging the connector.

1. Remove the blank faceplate from the appropriate WAN slot by removing the three WPIM screws that secure it to the standoffs.
2. Orient the WPIM-T1/DDS as shown in [Figure 2-1](#).
3. Carefully insert the WPIM-T1/DDS connector into the WPIM connector pins on the device.
4. Press down firmly on the WPIM-T1/DDS until the pins slide all the way into the connector. Ensure that the WPIM-T1/DDS seats flush on the standoffs.
5. Secure the WPIM-T1/DDS to the three standoffs with the WPIM screws.

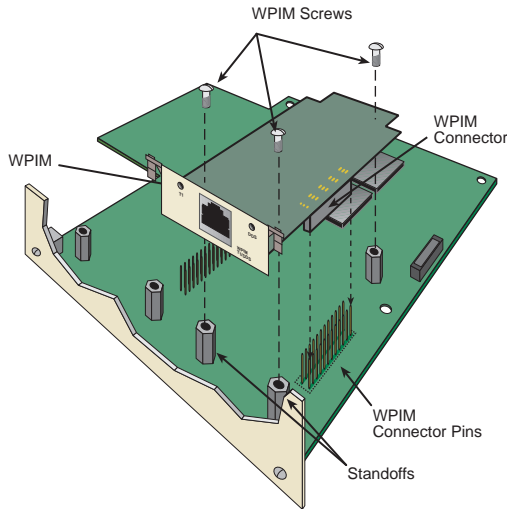


Figure 2-1 Installing the WPIM-T1/DDS

2.1.4 Post-Installation

1. Reinstall the cover as applicable.
2. Refer to the host platform user's guide to reinstall the network cables and refer to [Appendix A](#) for cabling information for the WPIM-T1/DDS. Do not connect the WAN cable until instructed to do so.
3. Refer to instructions contained in the host platform user's guide to reapply power.
4. After reapplying power, check the LEDs for the following conditions:
 - Verify that the **PWR** LED is on, indicating that the device is receiving power.
 - After the host platform runs a self test, the **CPU** LED blinks green indicating normal operation.
 - If the **CPU** LED remains red, contact Cabletron Systems.

2.2 LEDs

The LEDs on the WPIM-T1/DDS indicate the service that the WPIM-T1/DDS is providing. (See [Figure 2-2](#).) If the T1 LED is lit, the WPIM-T1/DDS is operating in T1 mode. If the DDS LED is lit, the WPIM-T1/DDS is operating in DDS mode.

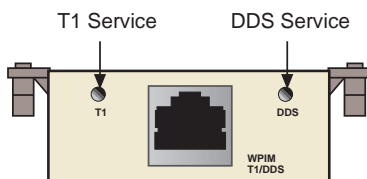


Figure 2-2 LED Indicators

The host platform displays LED indications of the WPIM-T1/DDS's operation. For more information on host platform LEDs, refer to the host platform manual.

2.3 REQUIRED OPERATIONS

The WPIM-T1/DDS must be configured before connecting to the WAN. The configuration must be performed in the following order:

- Choose T1 or DDS mode ([Section 2.3.1](#))
- WAN configuration, using QuickSET or Local Management ([Section 2.3.2](#))

2.3.1 Choosing T1 or DDS Mode

The mode (T1 or DDS) must be chosen before either QuickSET or Local Management is used to configure the WAN set up.



The WPIM-T1/DDS cannot operate in both T1 and DDS mode at the same time. The user must choose one or the other service, but can change it when desired.

When the WPIM-T1/DDS is first powered up, the default is T1.

This is done using Network Tools, or MIB Navigator, depending on the host platform. Refer to the host platform user's guide for information on how to navigate through the Local Management screens in order to access Network Tools.

Follow these steps to configure the WPIM-T1/DDS for T1 or DDS service:

1. Once in Network Tools, choose between T1 and DDS setup using this command:

```
t1dds <SLOT> <T1/DDS>
```

where SLOT is either 1 for slot one of the host platform for the WPIM, or 2 for slot two, and T1/DDS is either 1 for DDS service, or 2 for T1 service.

2. Assuming the WPIM-T1/DDS is installed in slot 1, use the following command to allow the WPIM-T1/DDS in slot 1 to perform T1 service:

```
t1dds 1 2
```

To perform DDS service, use the following command, also for slot 1:

```
t1dds 1 1
```

3. Press the ENTER key. The unit automatically reboots and the user must re-enter Local Management.

2.3.2 WAN Configuration

The WPIM-T1/DDS must be configured for WAN operation using either QuickSET or Local Management before the WAN is connected.

Refer to the QuickSET manual for specific instructions on how to access the Wide Area configuration for the WPIM-T1/DDS. Refer to [Related Manuals](#) in order to obtain the QuickSET manual.

For Local Management configuration, refer to [Chapter 3](#) for T1 configuration, or [Chapter 4](#) for DDS configuration.

The WAN configuration from QuickSET or either [Chapter 3](#) or [Chapter 4](#) must be completed before proceeding to the next step.

2.4 CONNECTING THE WAN CABLE TO THE WPIM-T1/DDS

Before connecting any cabling to the WPIM-T1/DDS, the WAN configuration must be complete. Refer to the previous section for information (Section 2.3.2) if the WAN configuration has not been completed.



DO NOT plug the WAN cable into the external WAN connection until you have properly completed the WAN setup in software. If this cable is plugged in prematurely, before the host unit is configured, the telephone company can disable the WAN line for a period of time. The cable will be plugged in as a final step once you run the QuickSET configuration, or the Local Management configuration.

The RJ45 cable from the WPIM-T1/DDS must be plugged into the WAN connection wall jack (see Figure 2-3, below). The cables are not supplied with the WPIM-T1/DDS, but may be ordered separately from Cabletron Systems (cable part number 9372094 for T1, and part number 9360119 for DDS service). Refer to Appendix A for details.

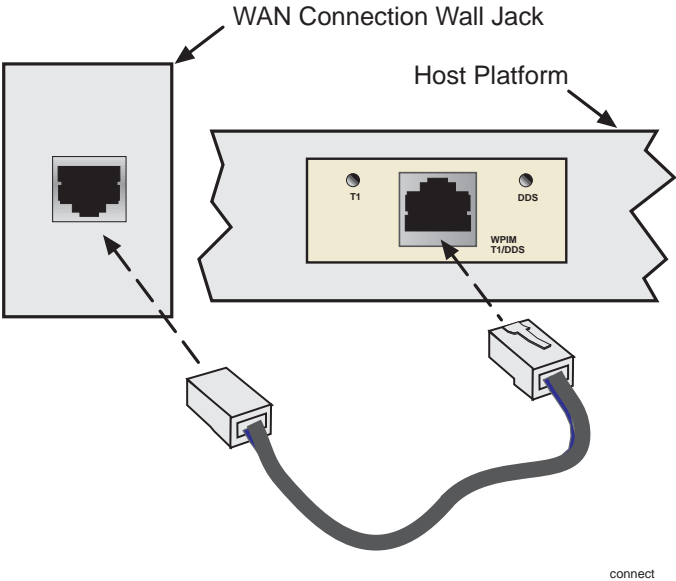


Figure 2-3 WAN Connection to the WPIM-T1/DDS

CHAPTER 3

LOCAL MANAGEMENT FOR T1 SERVICE

This chapter explains how to configure the WPIM-T1/DDS through Local Management for T1 service.

The **WAN Physical Configuration screen** and the **WAN Interface Configuration screen** appear as Local Management menu selections when you install the WPIM-T1/DDS into a host module. Refer to the host platform User's Guide for instructions about how to set up and access Local Management.

Sections of this chapter include:

- The WAN Physical Configuration screen, [Section 3.1](#)
- The WAN Interface Configuration screen, [Section 3.2](#)
- Full T1 Configuration using PPP, [Section 3.3](#)
- Fractional T1 Configuration using PPP, [Section 3.4](#)
- Frame Relay Configuration, [Section 3.5](#)

Read [Section 3.1](#) and [Section 3.2](#) to gain an understanding of the WPIM-T1/DDS Local Management screens for T1. [Section 3.3](#) through [Section 3.5](#) provide examples for setting up the WPIM-T1/DDS for full or fractional T1 in a PPP environment, or for configuring the WPIM-T1/DDS for Frame Relay in the T1 mode.



Navigate through the WPIM Local Management screens using the following keyboard commands:

Arrow keys to move up, down, right or left within the screen.
SPACE bar to toggle between selections in a field.
ENTER (RETURN) to implement a selection.

 


The WPIM-T1/DDS cannot operate in both T1 and DDS mode at the same time. The user must choose one or the other service, but can change it when desired. Refer to [Section 2.3.1](#) to choose the mode.

When the WPIM-T1/DDS is first powered up, the default is T1.

3.1 THE WAN PHYSICAL CONFIGURATION SCREEN

To access the WAN Physical Configuration screen, use the arrow keys to highlight the **WAN SETUP** menu item, then press ENTER. The screen shown in Figure 3-1 displays.



When there is more than one WPIM installed into the host platform, information for the second WPIM will display next to WPIM 1.

<host name> Local Management

Flash Image Version: xx.xx.xx

WAN PHYSICAL CONFIGURATION

WPIM 1

Type: T1

WPIM #: 1

Mgr Type: [PPP]

Max VCs: 024

Next IF: 003

WPIM 1 Line Configuration

T1 Timeslot View: [Active]

T1 Line Coding: [B8ZS]

T1 Frame Type: [ESF]

T1 Tx Clock Source: [Loop-Timing]

T1 Line Buildout: [0 db]

T1 Loopback: [None]

WPIM 1 Timeslot Configuration

01-08	000	000	000	000	000	000	000	000
09-16	000	000	000	000	000	000	000	000
17-24	000	000	000	000	000	000	000	000

SAVE

[WPIM 1]

WAN INT CONFIG

REMOTE SETUP


RETURN

275002

Figure 3-1 WAN Physical Configuration Screen

3.1.1 WAN Physical Configuration Screen Fields

 The following sections describe WAN Physical Configuration screen fields and provide instructions for setting them. The WAN Physical Configuration screen lets you configure the WPIM or “Physical Interface.”



The Type field displays either T1 or DDS, depending on the mode selected using Network Tools.

To select the WPIM you wish to configure, proceed as follows:

1. Use the arrow keys to highlight the **WPIM X** command field at the bottom of the screen.
2. Use the SPACE bar to select the appropriate WPIM, then press ENTER. The WAN Configuration screen automatically displays unique configuration fields for each WPIM as shown in [Figure 3-1](#).

The WAN Physical Configuration screen displays the following information for each WPIM:

WPIM 1-2 (Read-Only)

Displays configuration information for up to two different WPIMs.

Type (Read-Only)

Displays the type of WPIM installed. For the WPIM-T1/DDS, the Type field displays the service selected. When T1 service is selected, T1 is displayed. When DDS service is selected, DDS is displayed.

WPIM # (Read-Only)

Displays the number of the slot in which the WPIM resides.

Mgr Type (Selectable)

Used to select the type of protocol manager. For the T1 mode of the WPIM-T1/DDS, the available options are PPP, FR PtoMP, FR PtoP, HDLC and NONE. The field defaults to NONE.

Max VCs (Modifiable)

Displays the maximum number of virtual circuits (interfaces) available to be configured. The default number displayed depends on the Protocol Manager chosen.

Next IF (Read-Only)

Displays the next interface available to be used.

SAVE (Command)

Saves the chosen configuration.

WPIM X (Toggle)

Enables the user to select the WPIM to be configured. Once it is selected, the user can enter the screens of the WPIM selected to modify the data.

WAN INT CONFIG (Command)

When this field is highlighted and the ENTER key is pressed, the WAN Interface Configuration screen displays. Refer to [Section 3.2](#) for details.

REMOTE SETUP (Command)

Used to modify the remote profiles.

RETURN (Command)

Returns user to the previous screen in the hierarchy.

3.1.2 WPIM Line Configuration Fields

The configuration fields displayed on the WAN Physical Configuration screen shown in [Figure 3-1](#) are specific to the T1 mode of the WPIM-T1/DDS.



The service provider (i.e., AT&T, Sprint, MCI, Bell Atlantic, etc.) determines the settings for the following fields. Consult the service provider for the correct settings.

T1 Timeslot View (Toggle)

Displays the status of the Timeslot Configuration Table. This field toggles between Active and New. The field comes up with the default setting **Active**. The Active setting displays current Timeslot Configuration table settings. The New setting allows you to change Timeslot Configuration table settings. The default setting for the Timeslot Configuration table is all Timeslots not assigned (**000**).

T1 Line Coding (Toggle)

Displays the line coding for the physical T1 line. This field toggles between B8ZS and AMI. The default setting is **B8ZS**.

T1 Frame Type (Toggle)

Displays the T1 Frame type. This field toggles between ESF and D4. The default setting is **ESF**.

T1 Tx Clock Source (Toggle)

Displays the T1 Transmit Clock Source. This field toggles between Loop-Timing (Extracted Line Data) and Local-Timing (Internal Clock). The default setting is **Loop-Timing**.

T1 Line Buildout (Selectable)

Displays the line coding for the physical T1 line. Set this to 0 dB unless the service provider recommends another setting. The default setting for this field is **0 dB**. The following settings are available in this field:

- 0 dB
- -7.5 dB
- -15 dB
- -22.5 dB
- 133-266 Ft
- 267-399 Ft
- 400-533 Ft
- 534-655 Ft

T1 Loopback (Selectable)

Network Loopback is a testing procedure that segments the line and allows the user to isolate faults. The selections for this field are None, Line-Loop, and Payload-Loop. In Line-Loop the entire T1 line is looped back, including the framing bits, CRC, and the facility data link. This happens before the framer. In Payload-Loop, only the 24 time slots are looped back, which happens behind the framer, and does not include the framing bits, CRC, and facility data link. The WPIM-T1/DDS must be in Loop-Timing mode to use this option. The default setting is **None**.

3.1.3 The WPIM Timeslot Configuration Table

The WPIM Timeslot Configuration table allows the user to configure the way in which the Cabletron Systems WAN module uses the T1 line. The configuration table consists of 24 Timeslots. Each Timeslot must be assigned an **Interface** number (for example, 002 for an active Interface number or 000 if the Timeslot is not used). When an entire T1 line is leased, all 24 Timeslots (the full T1 bandwidth) can be used. If only a fraction of the T1 line is leased, the service provider indicates which Timeslots to use.

Timeslots can be utilized in any way chosen. The WPIM-T1/DDS in T1 mode supports Time Division Multiplexing (TDM) allowing channelization of circuits (Timeslots) within the public network. For example, if the WPIM-T1/DDS has access to a full T1 (24 Timeslots), and the user wants to communicate with two other sites, the configuration might look like that shown in Figure 3-2.

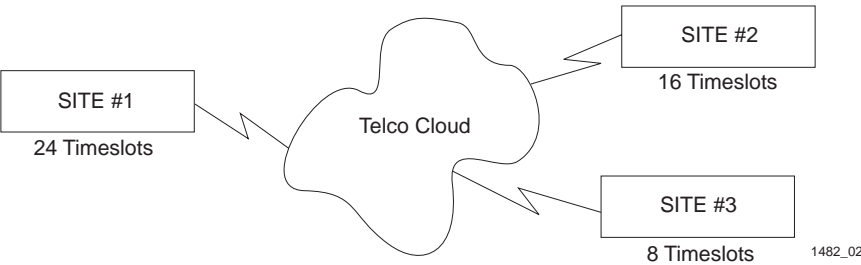


Figure 3-2 Sample Timeslot Configuration

Figure 3-3 shows a sample configuration for three sites. Of the 24 Timeslots, Site #1 uses 16 to communicate with Site #2 and the remaining 8 to communicate with Site #3. This configuration varies tremendously depending on how the service provider maps out the T1 Timeslots. The service provider indicates which Timeslots are active.

01-08	005	005	005	005	005	005	005	005	01-08	005	005	005	005	005	005	005	005
09-16	005	005	005	005	005	005	005	005	09-16	005	005	005	005	005	005	005	005
17-24	006	006	006	006	006	006	006	006	17-24	000	000	000	000	000	000	000	000
SITE #1									SITE #2								
									01-08	000	000	000	000	000	000	000	000
									09-16	000	000	000	000	000	000	000	000
									17-24	006	006	006	006	006	006	006	006
									SITE #3								

Figure 3-3 Sample Configuration

Site #1 is using the full T1, so all the Timeslots must have an Interface assignment. Site #2 and Site #3 use only a fraction of the T1, but the total quantity of Timeslots must match those of Site #1. Unused Timeslots receive an Interface number of 000.



The Interface numbers of Site #1, Site #2 and Site #3 do not have to match. Only the **quantity** and **position** of Timeslots must match (the service provider assigns the Timeslots).

3.2 THE WAN INTERFACE CONFIGURATION SCREEN

The following sections describe the features of the WAN Interface Configuration screen. Access the screen by using the arrow keys to highlight the **WAN INT CONFIG** command field at the bottom of the WAN Physical Configuration screen, then press ENTER. The WAN Interface Configuration screen shown in Figure 3-4 displays.

<host name> Local Management

Flash Image Version: xx.xx.xx

WAN INTERFACE CONFIGURATION

Interface Number: 000

Max Xmit Unit: 0

ProtMgr Iface: [0]

Active Protocol: FR

FR LMI: [ANSI_94]

DLCI Address: 0

DLCI DCP En:

DLCI DCP Stat:

Comp Ratio:

Circuit State: [Invalid]

CKT#	IF#	LID	STATE	CKT#	IF#	LID	STATE
001	001	Enet	UP	017			
002	002	Enet	DOWN	018			
003				019			
004				020			
005				021			
006				022			
007				023			
008				024			
009				025			
010				026			
011				027			
012				028			
013				029			
014				030			
015				031			
016				032			

SAVE

PORTS:
[1-32]

RETURN

2750_04

Figure 3-4 WAN Interface Configuration Screen

3.2.1 WAN Interface Configuration Screen Fields

This section describes the WAN Interface Configuration screen fields.

Interface Number (Modifiable)

Displays the active Interface Number. Used to configure the Interface Numbers that were assigned to the Timeslots on the WAN Physical Configuration screen.

Max Xmit Unit (Modifiable)

Displays the maximum packet size that can be transmitted on the selected interface. The default settings for this field depend on the Protocol Manager chosen.

ProtMgr Iface (Modifiable)

Interface number used for the Protocol Manager chosen.

Active Protocol (Read-Only)

Displays the active OSI layer protocol (Protocol Manager) chosen for the WPIM-T1/DDS. There is one set of parameters displayed for FR, and one set for PPP. Refer to [Section 3.2.1.1](#) for information on the Active Protocol set to Frame Relay, and [Section 3.2.1.2](#) for PPP information.

3.2.1.1 Frame Relay as the Protocol Manager

Refer to [Figure 3-4](#) for the following parameters displayed for FR.

FR LMI (Selectable)

Frame Relay Link Management Interface. This field displays ANSI_94, NO LMI, T1.617-D or Q.933-A. The NO LMI setting is for specialized applications in which no Frame Relay Link Management is available or required.

DLCI Address (Modifiable)

Data Link Connection Identifier given by the Service Provider. Can be set to values from 0-1023, depending on the protocol, when available for modification with certain protocol modes. The values 0-15 and 1008-1022 are reserved DLCI addresses. When using FR PtoMP as the Protocol Manager, the WPIM-T1/DDS can learn the DLCIs dynamically from the switch.

DLCI DCP En (Toggle)

Enables the user to turn Data Compression Protocol On or Off on an application port per application port basis when available. The DLCI port must be entered to change compression.

DLCI DCP Stat (Read-Only)

Displays the current negotiated status of compression.

Comp Ratio (Read-Only)

Displays the Compression Ratio, which is the ratio of uncompressed to compressed data.

Circuit State (Selectable)

The field initially displays the state of the DLCI circuit, and can be modified. Steps through Active, Inactive and Invalid.

3.2.1.2 PPP as the Protocol Manager

<host name> Local Management
Flash Image Version: xx.xx.xx

WAN INTERFACE CONFIGURATION

Interface Number: **003**

Max Xmit Unit: **1526**

ProtMgrIface: **[0]**

Active Protocol: **PPP**

PPP MRU: **1520**

ECP Enable: **[Off]**

ECP Status: **Off**

CCP Enable: **[Off]**

CCP Status: **Off**

Comp Ratio: **1:1**

CKT#	IF#	LID	STATE	CKT#	IF#	LID	STATE
001	001	Enet	UP	017			
002	002	Enet	DOWN	018			
003				019			
004				020			
005				021			
006				022			
007				023			
008				024			
009				025			
010				026			
011				027			
012				028			
013				029			
014				030			
015				031			
016				032			

SAVE
PORTS: [1-32]
RETURN

2750_02

Figure 3-5 WAN Interface Configuration Screen (PPP)

Refer to [Figure 3-5](#) for the following parameters displayed for PPP.

PPP MRU (Modifiable)

Displays the Maximum Receive Units that PPP can handle, modifiable by the user.

ECP Enable (Toggle)

Toggles between On and Off to enable or disable encryption.

ECP Status (Read-Only)

Displays the status of encryption.

CCP Enable (Toggle)

Toggles between On and Off to enable or disable compression.

CCP Status (Read-Only)

Displays the status of compression.

Comp Ratio (Read-Only)

Displays the Compression Ratio, which is the ratio of uncompressed to compressed data.

3.2.1.3 Command and Interface Table Fields

SAVE (Command)

Saves the configuration changes.

PORTS: [1-32] (Command)

Interface table displays the range of circuits shown in the command field. Use the SPACE bar and either the BACKSPACE or DELETE key to step through the displays.

RETURN (Command)

Returns user to the previous screen.

CKT# (Read-Only)

Displays the circuit number of the application ports available from the host platform. If the active protocol is PPP or FR PtoP, only one application port per interface number (IF#) is assigned. If the active protocol is FR PtoMP, the available WAN ports from the host platform may be assigned, one per DLCI.

IF# (Read-Only)

Displays the MIB II Interface number that is associated with the application port (CKT#).

LID (Read-Only)

Displays the Link Identifier. If the active protocol is Frame Relay, the Data Link Connection Identifier is displayed. If the active protocol for this interface is PPP, then PPP displays in this field. For Ethernet ports, Enet is displayed.

STATE (Read-Only)

Displays the status of the application port. If the active protocol is Frame Relay, this field displays the status as Active, Inactive, or Invalid (no LMI). If the active protocol is PPP or Ethernet, this field displays UP (active) or DOWN (inactive).

3.3 FULL T1 CONFIGURATION USING PPP

This section provides step-by-step instructions for configuring the WPIM-T1/DDS to use a full T1 circuit in a PPP environment. This simplified example assumes the setup shown in [Figure 3-6](#) using a CSX400 with a WPIM-T1/DDS installed at Site #1. Configurations may vary depending on the host platform.

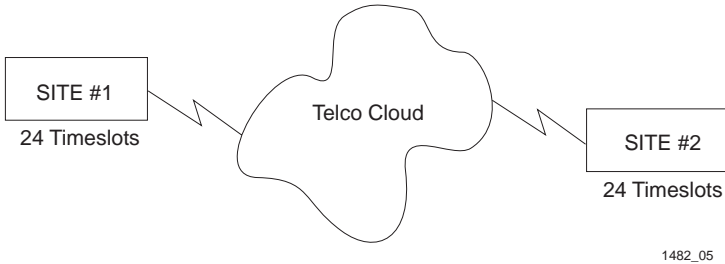


Figure 3-6 Full T1 Configuration

The line configuration information shown in [Table 3-1](#) must be supplied by the service provider.

Table 3-1 Telco Configuration Information

Configuration Information Required by User	Configuration Information Supplied by Service Provider
Line Coding	B8ZS or AMI
Frame Type	ESF or D4
Clock Source	Loop Timing or Local Timing

3.3.1 T1 Service Physical Configuration

Begin the T1 configuration by accessing the WAN Physical Configuration screen through Local Management ([Figure 3-1](#)). Access the WAN Physical Configuration screen from the WAN SETUP menu item in the host platform.

Proceed with the following steps:

1. Use the arrow keys to highlight the **WPIM X** field at the bottom of the screen. Press the SPACE bar to select the number of the WPIM to be configured, then press ENTER.
2. Use the arrow keys to highlight **MgrType**. Select PPP.



When changing from one protocol to another on a WPIM-T1/DDS that has been operational, save NONE as the protocol before changing to another protocol.

3. Use the arrow keys to highlight **Timeslot View**. Press the SPACE bar to select **New**, then press ENTER. The cursor moves to Timeslot #1 of the Timeslot Configuration Table.
4. Insert an interface number (refer to NOTE below) into every timeslot as needed. Type the number, press ENTER, then use the arrow keys to highlight the next timeslot field. Exit this field by using the arrow keys. The cursor automatically moves to the **T1 Line Coding** field.



The value assigned to the timeslots is the interface being used for WAN communication. The next available interface is displayed on the WAN Physical Configuration screen in the Next IF field (see [Figure 3-1](#)). The Next IF number shown must be used to add a new interface. The Next IF will increment as interfaces are added. The previously entered interfaces can be modified by entering the interface number.

The following four steps are based on information supplied by the service provider. Consult the service provider for the correct settings.

5. Use the arrow keys to highlight **T1 Line Coding**. Press the SPACE bar to select **B8ZS** or **AMI**, then press ENTER.
6. Use the arrow keys to highlight **T1 Frame Type**. Press the SPACE bar to select **ESF** or **D4**, then press ENTER.

7. Use the arrow keys to highlight **T1 TX Clock Source**. Press the SPACE bar to select **Local** (no clock source provided by telephone company) or **Loop-Timing** (clock source provided by telephone company), then press ENTER.



If you are using a Local clock source, set only one end of the circuit for Local, and the other end must be set for Loop.

8. Use the arrow keys to highlight **T1 Line Buildout** (LBO). Press the SPACE bar to select **0 dB** unless the service provider recommends another setting, then press ENTER.
9. Use the arrow keys to highlight **T1 Network Loopback**. Press the SPACE bar to select **None**, then press ENTER.
10. Use the arrow keys to highlight the **SAVE** command, then press ENTER. The message “SAVE DONE!” displays and Local Management saves the changes to memory. “REBOOT IN PROGRESS.....” displays and the host platform reboots. Re-entry to management is necessary for any further configuration.
11. Proceed to [Section 3.3.2](#) to continue configuration.

3.3.2 T1 Interface Configuration

The WAN Interface Configuration screen is accessed through the WAN Physical Configuration screen. Access the WAN Interface Configuration screen by using the arrow keys to highlight the WAN INT CONFIG command and press ENTER. Refer to [Figure 3-4](#) and proceed with the following steps to configure the WAN Interface.

1. Set the WAN connection Interface Number by typing the same number into the **Interface Number** field that was input into the timeslots in the WAN Physical Configuration screen, then press ENTER (refer to the Note on [page 3-12](#)).
2. Unless the user sets the Max Xmit Unit, the WPIM-T1/DDS automatically sets the **Max Xmit Unit** to **1526** (default for PPP) after the protocol manager type is selected.
3. Make any changes to the available settings as desired.

4. Use the arrow keys to highlight the **SAVE** command, then press ENTER. The message “Save Done!” appears and Local Management saves the changes to memory.

The WAN configuration is complete. It takes up to 60 seconds for the WAN Interface to come out of standby and for communications to begin.

3.4 FRACTIONAL T1 CONFIGURATION USING PPP

This section provides step-by-step instructions for configuring the WPIM-T1/DDS to use a fractional T1 circuit in a PPP environment. This example assumes the setup shown in [Figure 3-7](#) using two CSX400s with each containing a WPIM-T1/DDS. Configurations may vary depending on the host platform. In a fractional T1 setup, only a portion of the 24 Timeslots or DS-0s are used.



The terms DS-0 (Digital Signal, level 0) and Timeslot are used synonymously in this guide to represent a standard 64,000 bps channel.

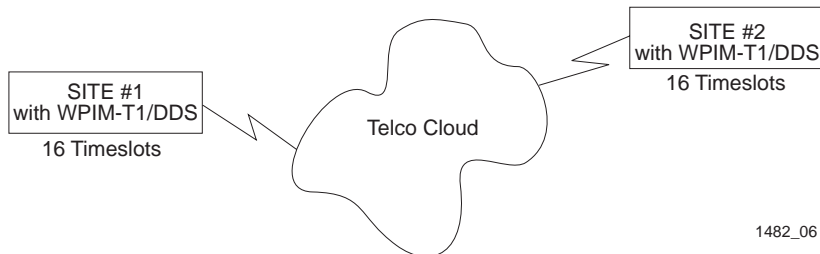


Figure 3-7 Fractional T1 Configuration

The line configuration information shown in Table 3-2 must be supplied by the service provider.

Table 3-2 Telco Configuration Information

Configuration Information Required by User	Configuration Information Supplied by Service Provider
Line Coding	B8ZS or AMI
Frame Type	ESF or D4
Clock Source	Loop Timing or Local Timing
DS-0s (Timeslots)	Timeslots being used for each end of the circuit

3.4.1 T1 Physical Configuration

Begin the WPIM-T1/DDS physical configuration by accessing the WAN Physical Configuration screen through Local Management (Figure 3-1).

Proceed with the following steps:

1. Use the arrow keys to highlight the **WPIM X** field at the bottom of the screen. Press the SPACE bar to select the number of the WPIM being configured, then press ENTER.
2. Use the arrow keys to highlight **MgrType**. Select PPP.



When changing from one protocol to another on a WPIM-T1/DDS that has been operational, save NONE as the protocol before changing to another protocol.

3. Use the arrow keys to highlight **Timeslot View**. Press the SPACE bar to select **New**, then press ENTER. The cursor moves to Timeslot #1 of the Timeslot Configuration Table.
4. Insert an interface number (refer to Note below) into every Timeslot being used (in the example shown back in Figure 3-7, 16 Timeslots are used, the rest have zeros in them). Type the number, press ENTER, then use the arrow keys to highlight the next Timeslot field. Exit this field by using the arrow keys. The cursor automatically moves to the **T1 Line Coding** field.



The value assigned to the timeslots is the interface being used for WAN communication. The next available interface is displayed on the WAN Physical Configuration screen in the Next IF field (see [Figure 3-1](#)). The Next IF number shown must be used to add a new interface. The Next IF will increment as interfaces are added. The previously entered interfaces can be modified by entering the interface number.

The following four steps are based on information supplied by the service provider. Consult the service provider for the correct settings.

5. Use the arrow keys to highlight **T1 Line Coding**. Use the SPACE bar to select **B8ZS** or **AMI**, then press ENTER.
6. Use the arrow keys to highlight **T1 Frame Type**. Use the SPACE bar to select **ESF** or **D4**, then press ENTER.
7. Use the arrow keys to highlight **T1 Tx Clock Source**. Use the SPACE bar to select **Local** (no clock source provided by telephone company) or **Loop-Timing** (clock source provided by telephone company), then press ENTER.



If you are using a Local clock source, set only one end of the circuit for Local, the other end must be set for Loop.

8. Use the arrow keys to highlight **T1 Line Buildout (LBO)**. Press the SPACE bar to select **0 dB** unless the service provider recommends another setting, then press ENTER.
9. Use the arrow keys to highlight **T1 Network Loopback**. Press the SPACE bar to select **None**, then press ENTER.
10. Use the arrow keys to highlight the **SAVE** command, then press ENTER. The message “Save Done!” appears and Local Management saves the changes to memory. The host platform reboots, and re-entry to Local Management is necessary for any further configuration.
11. Proceed to the [Section 3.4.2](#) to continue configuration.

3.4.2 T1 Interface Configuration


The WAN Interface Configuration screen is accessed through the WAN Physical Configuration screen. Access the WAN Interface Configuration screen by using the arrow keys to highlight the **WAN INT CONFIG** command and press ENTER. Refer back to [Figure 3-4](#) and proceed with the following steps to configure the WAN Interface.

1. Set the WAN connection Interface Number by typing the same number into the **Interface Number** field that was input into the timeslots in the WAN Physical Configuration screen, then press ENTER (refer to the Note on [page 3-16](#)).
2. Unless the user sets the Max Xmit Unit, the WPIM-T1/DDS automatically sets the **Max Xmit Unit** to **1526** (default) after the active protocol (PPP) is selected.
3. Make any changes to the available settings as desired.
4. Use the arrow keys to highlight the **SAVE** command, then press ENTER. The message “Save Done!” appears and Local Management saves the changes to memory.

The WAN configuration is complete. It takes up to 60 seconds for the WAN Interface to come out of standby and for communications to begin.

3.5 FRAME RELAY CONFIGURATION

This section provides step-by-step instructions for configuring the WPIM-T1/DDS to use a T1 circuit in a Frame Relay environment. This example assumes the setup shown in [Figure 3-8](#) using two CSX400s, each with a WPIM-T1/DDS installed. Configurations may vary depending on the host platform.

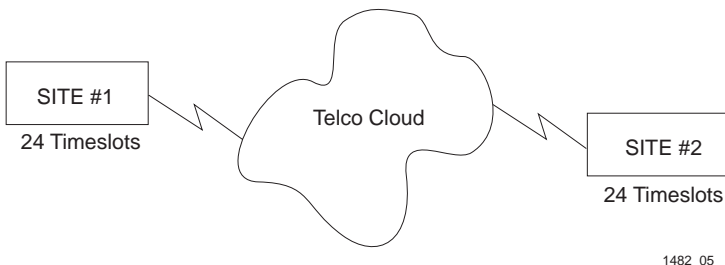

1482_05

Figure 3-8 Frame Relay Configuration

The line configuration information shown in Table 3-3 must be supplied by the service provider.

Table 3-3 Telco Configuration Information

Configuration Information Required by Customer	Information Supplied by Service Provider
Line Coding	B8ZS or AMI
Frame Type	ESF or D4
Clock Source	Loop Timing or Local Timing
DS-0s (Timeslots)	Timeslots being used for each end of the circuit

3.5.1 Frame Relay Physical Configuration

Begin the WPIM-T1/DDS physical configuration by accessing the WAN Physical Configuration screen through Local Management (Figure 3-1). Proceed with the following steps:

- 1. Use the arrow keys to highlight the **WPIM X** field at the bottom of the screen. Press the SPACE bar to select the number of the WPIM to be configured, then press ENTER.

 
Use the arrow keys to highlight the **MgrType** field. Configure Protocol Manager Type as either FR PtoMP or FR PtoP. There are two settings for Frame Relay, Point to Point (FR PtoP) and Point to Multipoint (PtoMP). Frame Relay Point to Point has one Interface per DLCI assigned when DLCIs are created by the Service Provider. In Frame Relay Point to Multipoint, there is one interface to multiple DLCIs, and the DLCIs are dynamically learned. Backup can only be run on FR PtoP, not FR PtoMP.



When changing from one protocol to another on a WPIM-T1/DDS that has been operational, save NONE as the protocol before changing to another protocol.

- 2. Use the arrow keys to highlight **Timeslot View**. Press the SPACE bar to select **New**, then press ENTER. The cursor moves to the first timeslot available in the Timeslot Configuration Table.

3. Insert the interface number (refer to NOTE below) into the timeslot being used. Type the number, press ENTER, then exit this field by using the arrow keys. The cursor automatically moves to the **T1 Line Coding** field.



The value assigned to the timeslots is the interface being used for WAN communication. Only one interface can be assigned to the timeslot when running Frame Relay.

The next four steps are based on information supplied by the service provider. Consult the service provider for the correct settings.

4. Use the arrow keys to highlight **T1 Line Coding**. Press the SPACE bar to select **B8ZS** or **AMI**, then press ENTER.
5. Use the arrow keys to highlight **T1 Frame Type**. Press the SPACE bar to select **ESF** or **D4**, then press ENTER.
6. Use the arrow keys to highlight **T1 Tx Clock Source**. Press the SPACE bar to select **Local** (no clock source provided by telephone company) or **Loop-Timing** (clock source provided by telephone company), then press ENTER.
7. Use the arrow keys to highlight **T1 Line Buildout** (LBO). Press the SPACE bar to select to **0 dB** unless the service provider recommends another setting, then press ENTER.
8. Use the arrow keys to highlight the **SAVE** command, then press ENTER. The message “SAVE DONE!” displays and Local Management saves the changes to memory. “REBOOT IN PROGRESS.....” displays and the host platform reboots. Re-entry to management is necessary for any further configuration.
9. Proceed to [Section 3.5.2](#) to continue the configuration.

3.5.2 Frame Relay Interface Configuration

Access the WAN Interface Configuration screen through the WAN Physical Configuration screen, by using the arrow keys to highlight the **WAN INT CONFIG** command, then press ENTER. Proceed with the following steps to configure the WAN Interface.

1. Set the Interface Number that is being used for the WAN connection by typing the same number into the **Interface Number** field that was input into the timeslots in the WAN Physical Configuration screen, then press ENTER (refer to the Note on [page 3-19](#)). For Frame Relay PtoP, the interfaces are assigned when DLCIs are created (in this case a zero needs to be entered in this field).
2. Use the arrow keys to highlight **FR LMI**. Press the SPACE bar to select **ANSI_94**, **T1.617-D** or **Q.933-A**, then press ENTER.



The choice NO LMI under FR LMI is a test mode only and should not be used in a practical application.

3. Make any changes to the available settings as desired.
4. Use the arrow keys to highlight **SAVE**, then press ENTER. The message “SAVE DONE!” displays and Local Management saves the changes to memory.

In FR PtoP, the DLCIs must be entered statically, as they will not come up dynamically as in FR PtoMP.

In FR PtoMP, there is an option to statically enter the DLCIs in association with a Protocol Manager, the physical port and MIB II, using the DLCI field in the Interface screen. If the DLCI is not static, it will be deleted if the Frame Relay switch determines that the DLCI has been eliminated. If the Frame Relay switch previously reported status on a DLCI, when it does not report the status of the DLCI, the DLCI and its associated information is deleted from the platform. Static entries are never deleted automatically. They must be deliberately deleted by the user. To enter a DLCI, it is set to “Inactive” and saved, but to delete a DLCI, it must be accessed and entered as “Invalid” and saved.

The WAN configuration is complete. Communications between the WPIM-T1/DDS and the service provider's switch takes approximately one or two minutes to complete. A status of **Inactive** displays on a DLCI per DLCI basis by default until both ends of the DLCI are configured correctly. Once both end devices have negotiated link management with the switches, and are configured correctly on a DLCI per DLCI basis, the status field displays **Active**.

CHAPTER 4

 
LOCAL MANAGEMENT FOR DDS SERVICE

This chapter explains how to configure the WPIM-T1/DDS through Local Management. The WAN Physical Configuration screen and the WAN Interface Configuration screen display as Local Management menu selections after the WPIM-T1/DDS is installed into a host platform. Refer to the host platform User's Guide for instructions about how to set up and access Local Management.

Sections of this chapter include the following:

- The WAN Physical Configuration Screen, [Section 4.1](#)
- The WAN Interface Configuration Screen, [Section 4.2](#)
- WPIM-DDS Configuration, [Section 4.3](#)

Read [Section 4.1](#) and [Section 4.2](#) to gain an understanding of the WPIM-T1/DDS Local Management screens. [Section 4.3](#) provides examples for setting up the WPIM-DDS in a PPP or Frame Relay environment.




The WPIM-T1/DDS cannot operate in both T1 and DDS mode at the same time. The user must choose the appropriate service, but can change it when desired. Refer to [Section 2.3.1](#) to choose the mode.

When the WPIM-T1/DDS is first powered up, the default is T1.

4.1 THE WAN PHYSICAL CONFIGURATION SCREEN

To access the WAN Physical Configuration screen in Local Management, use the arrow keys to highlight the **WAN SETUP** menu item, then press ENTER. The screen shown in Figure 4-1 displays, with the WPIM-T1/DDS in DDS mode.

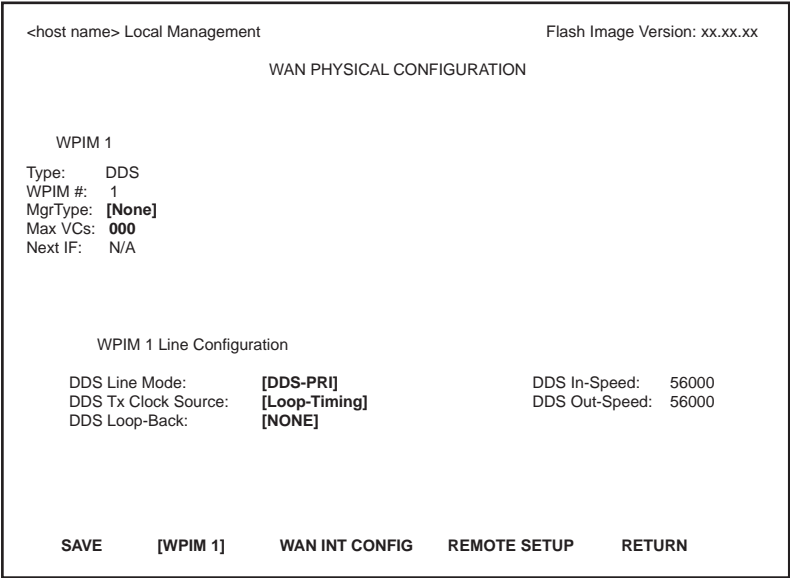

2750_01

Figure 4-1 WAN Physical Configuration Screen

4.1.1 WAN Physical Configuration Screen Fields

The following sections describe WAN Physical Configuration screen fields and provide instructions for setting them. The WAN Physical Configuration screen lets you configure the WPIM or “Physical Interface.”



When there is more than one WPIM installed into the host platform, information for the second WPIM will display next to WPIM 1.

The Type field displays either T1 or DDS, depending on the mode selected using Network Tools.

To select the WPIM-T1/DDS you wish to configure, proceed as follows:

1. Use the arrow keys to highlight the **WPIM X** command field at the bottom of the screen.
2. Use the SPACE bar to select the appropriate WPIM, then press ENTER. The WAN Configuration screen automatically displays unique configuration fields for the WPIM-T1/DDS as shown in [Figure 4-1](#).

The WAN Physical Configuration screen displays the following fields:

WPIM 1-2 (Read-Only)

Displays configuration information for two different WPIMs.

Type (Read-Only)

Displays the type of WPIM installed. For the WPIM-T1/DDS, the Type field displays the service selected. When T1 service is selected, T1 is displayed. When DDS service is selected, DDS is displayed.

WPIM # (Read-Only)

Displays the number of the slot in which the WPIM resides.

Mgr Type (Selectable)

The type of protocol manager is chosen in this field. For the DDS mode of the WPIM-T1/DDS, the available options are NONE, PPP, FR PtoMP, FR PtoP, and HDLC. The field defaults to NONE.

Max VCs (Modifiable)

Displays the maximum number of virtual circuits (interfaces) that the WPIM-T1/DDS may have with the protocol chosen.

Next IF (Read-Only)

Displays the next interface available to be used.

SAVE (Command)

Saves the chosen configuration.

WPIM X (Toggle)

User selects the WPIM to be configured. Once it is selected, the user can enter the screens of the WPIM selected to modify the data.

WAN INT CONFIG (Command)

When this field is highlighted and the ENTER key is pressed, the WAN Interface Configuration screen displays. Refer to [Section 4.2](#) for details.

REMOTE SETUP (Command)

Not used for the WPIM-T1/DDS.

RETURN (Command)

Returns user to the previous screen.

4.1.2 WPIM Line Configuration Fields

The configuration fields displayed on the WAN Physical Configuration screen shown in [Figure 4-1](#) are specific to the DDS mode of the WPIM-T1/DDS.

DDS Line Mode (Toggle)

Displays the DDS Line Mode. The selections toggle between DDS-PRI (primary) and DDS-CC (clear channel). This field should be set according to information from the service provider. The default setting for this field is **DDS-PRI**.

DDS Tx Clock Source (Toggle)

Displays the clock source as either Loop-Timing or Local-Timing. The Loop-Timing setting allows the WPIM-T1/DDS to receive its timing information from the service provider, and the Local-Timing setting allows the WPIM-T1/DDS to receive its timing information internally. If DDS-CC is chosen for the DDS Line Mode then this field must be set to Loop. The default setting is **Loop**.

DDS Loop-back (Toggle)

Displays the internal Loopback as either Line-Loop or None. Line loopback is reserved for network diagnostics only. The default is **None**.

DDS In-Speed (Read-Only)


Displays 56000 (bps) for Primary DDS Line Mode and 64000 (bps) for Clear Channel DDS Line Mode upon startup.

DDS Out-Speed (Read-Only)

Displays 56000 (bps) for Primary DDS Line Mode and 64000 (bps) for Clear Channel DDS Line Mode upon startup.

4.2 WAN INTERFACE CONFIGURATION SCREEN

This section describes the features of the WAN Interface Configuration screen. Access the screen by using the arrow keys to highlight the **WAN INT CONFIG** command field at the bottom of the WAN Physical Configuration screen, then press ENTER. The WAN Interface Configuration screen shown in Figure 4-2 displays.

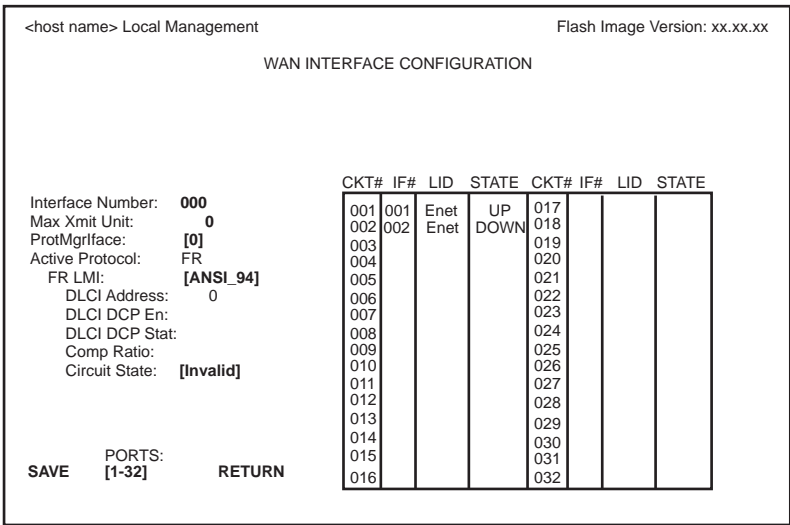

2750_02

Figure 4-2 WAN Interface Configuration Screen

4.2.1 WAN Interface Configuration Screen Fields

The following sections describe WAN Interface Configuration screen fields.

Interface Number (Modifiable)

Displays the active Interface Number. Use this field to configure the Interface Number assigned to the timeslots on the WAN Physical Configuration screen.

Max Xmit Unit (Modifiable)

User configured field that displays the maximum packet size that can be transmitted on the selected interface. The default settings for this field (1526 for PPP and 4095 for Frame Relay) depend on the Protocol Manager selected.

ProtMgrIface (Modifiable)

Interface number used for the Protocol Manager chosen.

Active Protocol (Read-Only)

Displays the active OSI layer protocol chosen for the WPIM-T1/DDS. There is one set of parameters displayed for FR, and one set for PPP. Refer to [Section 4.2.1.1](#) for information on the Active Protocol set to Frame Relay, and [Section 4.2.1.2](#) for PPP information.

4.2.1.1 Frame Relay as the Protocol Manager

Refer to [Figure 4-2](#) for the following parameters displayed for FR.

FR LMI (Selectable)

Frame Relay Link Management Interface. This field displays ANSI_94, NO LMI, T1.617-D or Q.933-A. The NO LMI setting is for specialized applications in which no Frame Relay Link Management is available or required.

DLCI Address (Modifiable)

Data Link Connection Identifier given by the Service Provider. The Telco switch assigns a virtual port to each DLCI. Can be set to values from 0-1023, depending on the protocol, when available for modification with certain protocol modes. The values 0-15 and 1008-1022 are reserved DLCI addresses.

DLCI DCP En (Toggle)

Enables the user to turn Data Compression Protocol On or Off when available.

DLCI DCP Stat (Read-Only)

Displays the current negotiated status of compression.

Comp Ratio (Read-Only)

Displays the Compression Ratio, which is the ratio of uncompressed to compressed data.

Circuit State (Selectable)

The field initially displays the state of the circuit, and can be modified. Steps through Active, Inactive and Invalid.

4.2.1.2 PPP as the Protocol Manager

<host name> Local Management
Flash Image Version: xx.xx.xx

WAN INTERFACE CONFIGURATION

Interface Number: **003**

Max Xmit Unit: **1526**

ProtMgrIface: **[0]**

Active Protocol: PPP

PPP MRU: **1520**

ECP Enable: **[Off]**

ECP Status: Off

CCP Enable: **[Off]**

CCP Status: Off

Comp Ratio: 1:1

CKT#	IF#	LID	STATE	CKT#	IF#	LID	STATE
001	001	Enet	UP	017			
002	002	Enet	DOWN	018			
003				019			
004				020			
005				021			
006				022			
007				023			
008				024			
009				025			
010				026			
011				027			
012				028			
013				029			
014				030			
015				031			
016				032			

SAVE
PORTS: [1-32]
RETURN

2750_02

Figure 4-3 WAN Interface Configuration Screen (PPP)

Refer to [Figure 4-3](#) for the following parameters displayed for PPP.

PPP MRU (Modifiable)

Displays the modifiable Maximum Receive Units that PPP can handle.

ECP Enable (Toggle)

Toggles between On and Off to enable or disable encryption.

ECP Status (Read-Only)

Displays the status of encryption.

CCP Enable (Toggle)

Toggles between On and Off to enable or disable compression.

CCP Status (Read-Only)

Displays the status of compression.

Comp Ratio (Read-Only)

Displays the Compression Ratio, which is the ratio of uncompressed to compressed data.

4.2.1.3 Command and Interface Table Fields

SAVE (Command)

Saves the configuration changes.

PORTS: [1-32] (Command)

Interface table displays the range of circuits shown in the command field. Use the SPACE bar and either the BACKSPACE or DELETE key to step through the displays.

RETURN (Command)

Returns user to the previous screen.

CKT# (Read-Only)

Displays the circuit number of the application ports available from the host platform. If the active protocol is PPP or FR PtoP, only one application port per interface number (IF#) is assigned. If the active protocol is FR PtoMP, the available WAN ports from the host platform may be assigned, one per DLCI.

IF# (Read-Only)

Displays the MIB II Interface number that is associated with the application port (CKT#).

LID (Read-Only)

Displays the Link Identifier. If the active protocol is Frame Relay, the Data Link Connection Identifier is displayed. If the active protocol for this interface is PPP, then PPP displays in this field. For Ethernet ports, Enet is displayed.

STATE (Read-Only)

Displays the status of the application port. If the active protocol is Frame Relay, this field displays the status as Active, Inactive, or Invalid (no LMI). If the active protocol is PPP or Ethernet, this field displays UP (active) or DOWN (inactive).

4.3 DDS SERVICE CONFIGURATION

This section provides step-by-step instructions for connecting the WPIM-T1/DDS to a Digital Data Service circuit in a PPP or Frame Relay environment. This example assumes the setup shown in Figure 4-4 using two CSX400s with WPIM-T1/DDS modules installed.

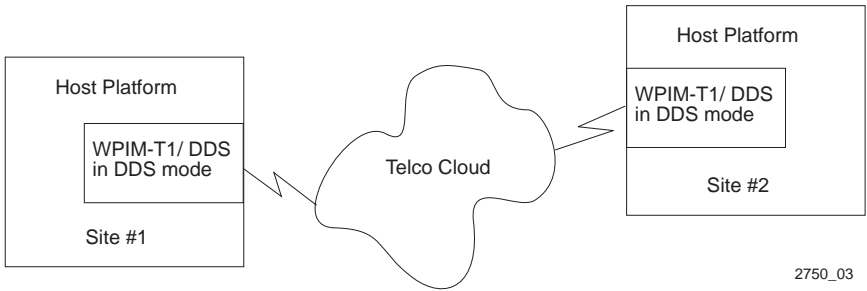


Figure 4-4 WPIM-DDS Interface Configuration for PPP

The line configuration information shown in Table 4-1, must be supplied by the service provider.

Table 4-1 Telco Configuration Information

Configuration Information Required By User	Configuration Information Supplied By Service Provider
Clock Source	Telco provided or no clock source
Line Mode	Primary or Clear Channel
FR-LMP (Frame Relay Only)	Telco provided or user requested

4.3.1 DDS Service Physical Configuration

Begin the DDS configuration by accessing the WAN Physical Configuration screen (Figure 4-1) through Local Management. To access the WAN Physical Configuration screen, use the arrow keys to highlight the **WAN Setup** option, then press ENTER. The screen shown in Figure 4-1 displays. Proceed with the following steps:

1. Use the arrow keys to highlight the **WPIM X** field at the bottom of the screen. Press the SPACE bar to select the number of the WPIM being configured, then press ENTER.

2. Use the arrow keys to highlight **MgrType**, and choose the Protocol Manager from **PPP**, **FR PtoMP**, **FR PtoP**, or **HDLC** using the space bar to toggle the selections.



When changing from one protocol to another on a WPIM-T1/DDS that has been operational, save **NONE** as the protocol before changing to another protocol.

3. Use the arrow keys to highlight **DDS Line Mode**. Press the SPACE bar to set the DDS Line Mode to **DDS-PRI** or **DDS-CC**, then press ENTER.
4. Use the arrow keys to highlight **DDS Tx Clock Source**. Press the SPACE bar to set to **Loop-Timing**, then press ENTER.
5. Use the arrow keys to highlight **DDS Loop-back**. Press the SPACE bar to set to **NONE**, then press ENTER.
6. Use the arrow keys to highlight the **SAVE** command. Then press ENTER. The message “SAVE DONE!” displays and Local Management saves the changes to memory. “REBOOT IN PROGRESS.....” displays and the host platform reboots. Re-entry to management is necessary for any further configuration.

4.3.2 DDS Service Interface Configuration

The WAN Interface Configuration screen is accessed through the WAN Physical Configuration screen. Access the WAN Interface Configuration screen (Figure 4-2) by using the arrow keys to highlight the **WAN INT CONFIG** command, then press ENTER. Proceed with the following steps to configure the WAN Interface through Local Management.

1. Use the arrow keys to highlight **Interface Number**. Set the WAN connection Interface Number by typing the same number found in the Interface field on the WAN Physical Configuration screen into the Interface Number field, then press ENTER.

2. If Frame Relay was selected, use the arrow keys to highlight **FR LMI**. Press the SPACE bar to select **ANSI_94, NO LMI, T1.617-D**, or **Q.933-A**, then press ENTER.

If NO LMI was selected, complete the following:

- Use the arrow keys to highlight **DLCI Address**. This field can be set to values from 0-1023. The values 16-991 are typically used for virtual circuits.
 - Use the arrow keys to highlight **Circuit State**. Press the SPACE bar to select Active, then press ENTER.
3. If PPP was selected as the Protocol Manager instead of Frame Relay, the Max Xmit Unit setting may be changed from the default of 1526 if desired.
 4. Make any changes to the available settings as desired.
 5. Use the arrow keys to highlight the **SAVE** command. Press ENTER. The message "Save Done!" appears and Local Management saves the changes to memory.

The WAN configuration is complete. Communication between the WPIM-T1/DDS and the service provider's switch takes approximately one to two minutes to complete. A status of **Inactive** displays on a DLCI per DLCI basis by default until both ends of the DLCI are configured correctly. Once both end devices have negotiated link management with the switches, and are configured correctly on a DLCI per DLCI basis, the status field displays **Active**.

APPENDIX A

SPECIFICATIONS

This appendix provides operating specifications for the Cabletron Systems WPIM-T1/DDS. Cabletron Systems reserves the right to change these specifications at any time without notice.

A.1 PHYSICAL PROPERTIES

Dimensions	1.94 H x 6.2 W x 15.06 D (cm) .762 H x 2.44 W x 5.93 D (in)
Weight	113.6 g (4 ounces)
MTBF (Predicted)	200,000 hours

A.2 ENVIRONMENTAL REQUIREMENTS

Operating Temperature	5°C to 40°C (41°F to 104°F)
Storage Temperature	-30°C to 90°C (-22°F to °F)
Relative Humidity	5% to 95% (non-condensing)

A.3 REGULATORY COMPLIANCE

This equipment meets the following safety and electromagnetic compatibility (EMC) requirements:

Safety	UL 1950, CSA C22.2 No. 950, EN 60950, IEC 950, and 73/23/EEC
Electromagnetic Compatibility (EMC)	FCC Part 15, EN 55022, VCCI V-3, CSA C108.8, EN 50082-1, AS/NZS 3548, 89/336/EEC
Telecommunications	FCC CFR47 Part 68, CS-03

A.4 T1 INTERFACE CABLING

This appendix provides the Cabletron Systems part number and connector information for the Interface Cables used in both the T1 and DDS modes of the WPIM-T1/DDS.

Table A-1 lists Cabletron Systems part numbers for the interface cables for T1 mode. A standard 20-foot cable is available or the customer may specify the length of cable when ordering.

Table A-1 Cabletron T1 Cable Part Numbers

Interface Cable	Cabletron Part Number
T1 Line Interface Cable	9372094-20 ¹
	9372094-L ²

- 1. Standard 20 foot T1 Line Interface Cable.
- 2. (L denotes length required in feet or meters). For example: 9372094-3 denotes a 3 foot cable; 9372094-3M denotes a 3 meter cable.

A.4.1 Cable Assemblies and Pinouts

The following section provides connector information for the T1 interface cable.

Table A-2 T1 Connector Information

Cabletron interface cable part number	9372094
Description	T1 line interface cable
Connector 1	RJ48C
Connector 2	RJ48C

Table A-3 T1 RJ48 Connector Pin Assignments

Pin	Signal
1	Receive Ring
2	Receive Tip
3	Not Used
4	Transmit Ring
5	Transmit Tip
6	Not Used
7	Shield Ground
8	Shield Ground

Table A-4 T1 RJ48 DTE Pin Assignments

Pin	Signal
1	Receive Ring
2	Receive Tip
3	Not Used
4	Transmit Ring
5	Transmit Tip
6	Not Used
7	Shield Ground
8	Shield Ground

Table A-5 T1 RJ48 Network Pin Assignments

Pin	Signal
1	Receive Ring
2	Receive Tip
3	Not Used
4	Transmit Ring
5	Transmit Tip
6	Not Used
7	Not Used
8	Not Used

A.5 DDS PORT ASSIGNMENT

The DDS mode of the WPIM-T1/DDS features the RJ45 port to enable any Cabletron Systems product supporting the WPIM architecture to connect directly to a single Digital Data Service (DDS) circuit. The pinout information for the DDS mode of the port is shown in [Table A-6](#), below. [Table A-7](#) lists the Cabletron Systems part number for the DDS mode interface cable.

Table A-6 DDS Mode Network Pinout Assignments

PIN	SIGNAL
1	Transmit Ring
2	Transmit Tip
3	Not Used
4	Not Used
5	Not Used
6	Not Used
7	Receive Tip
8	Receive Ring

Table A-7 DDS Mode Interface Cable Part Number

Interface Cable	Cabletron Part Number
DDS Line Interface Cable	9360119-x

APPENDIX B

FCC Part 68 - USER'S INFORMATION

The following instructions are provided to ensure compliance with the Federal Communications Commission (FCC) Rules, Part 68.

1. This device must only be connected to the ISDN Basic Rate network behind an FCC Part 68 registered channel service unit. Direct connection is not allowed.
 - a. All direct connections to T1 lines must be made using standard plugs and jacks.
 - b. All direct connections to DDS lines must be made using standard plugs and jacks.
2. Before connecting your unit, you must inform the telephone company of the following information:

Port ID	REN/SOC	FIC	USOC
WPIM-T1/DDS	6.0N	04DU9-BN 04DU9-DN 04DU9-1KN 04DU9-1SN 04DU9-1ZN 04DU5-56 04DU5-64	RJ48C RJ48S

3. If the unit appears to be malfunctioning, it should be disconnected from the telephone lines until you learn if your equipment or the telephone line is the source of the trouble. If your equipment needs repair, it should not be reconnected until it is repaired.
4. If the telephone company finds that the equipment is exceeding tolerable parameters, the telephone company can temporarily disconnect service, although they will attempt to give you advance notice if possible.

5. Under the FCC Rules, no customer is authorized to repair this equipment. This restriction applies regardless of whether the equipment is in or out of warranty.
6. If the telephone company alters their equipment in a manner that will affect use of this device, they must give you advance warning so as to give you the opportunity for uninterrupted service. You will be advised of your right to file a complaint with the FCC.
7. The attached affidavit must be completed by the installer.
8. In the event of equipment malfunction, all repairs should be performed by our Company or an authorized agent. It is the responsibility of the users requiring service to report the need for service to our Company or to one of our authorized agents.

Service can be obtained at Cabletron Systems Technical Support:

Address: Cabletron Systems, Inc.
35 Industrial Way,
Rochester, NH 03867-0505

Phone: (603) 332-9400

Internet mail: support@cabletron.com

**AFFIDAVIT FOR THE CONNECTION OF
CUSTOMER EQUIPMENT TO 1.544 MBPS AND/OR
SUBRATE DIGITAL SERVICES**

For the work to be performed in the certified territory of

Telco's name: _____

State of: _____

Country of: _____

I, _____, of _____
(Name of Authorized Representative) (Customer Name)

_____, _____
(Customer's Address) (Telephone Number)

being duly sworn, state:

I have responsibility for the operation and maintenance of the terminal equipment to be connected to _____ Subrate digital services. The terminal equipment to be connected complies with Part 68 of the Commission's rules except for the encoded analog content and billing protection specifications. With respect to encoded analog content and billing protection:

- I attest that all operations associated with the establishment, maintenance and adjustment of the digital CPE with respect to encoded analog content and encoded billing information continuously complies with Part 68 of the FCC's Rules and Regulations.
- The digital CPE does not transmit digital signals containing encoded analog or billing information which is intended to be decoded within the telecommunications network.
- The encoded analog and billing protection is factory set and is not under the control of the customer.

I attest that the operator(s) maintainer(s) of the digital CPE responsible for the establishment, maintenance and adjustment of the encoded analog content and billing information has (have) been trained to perform these functions by successfully completing one of the following: Check appropriate one(s).

- a. A training course provided by the manufacturer/grantee of the equipment used to encode analog signals; or
- b. A training course provided by the customer or authorized representative, using training materials and instructions provided by the manufacturer/grantee of the equipment used to encode analog signals; or
- c. An independent training course (e.g. trade school or technical institution) recognized by the manufacturer/grantee of the equipment used to encode analog signals; or
- d. In lieu of the proceeding training requirements, the operator(s) maintainer(s) is (are) under the control of a supervisor trained in accordance with _____ above.

I agree to provide _____ with proper documentation
(Telco's Name)

to demonstrate compliance with the information as provided in the proceeding paragraph, if so requested.

_____ (Signature)

_____ (Title)

_____ (Date)

Subscribed and sworn to me this _____ day of _____, 19____.

(Notary Public)

My commission expires: